


ActiveSET.org - U.S. EPA Method 5 Sample Recovery

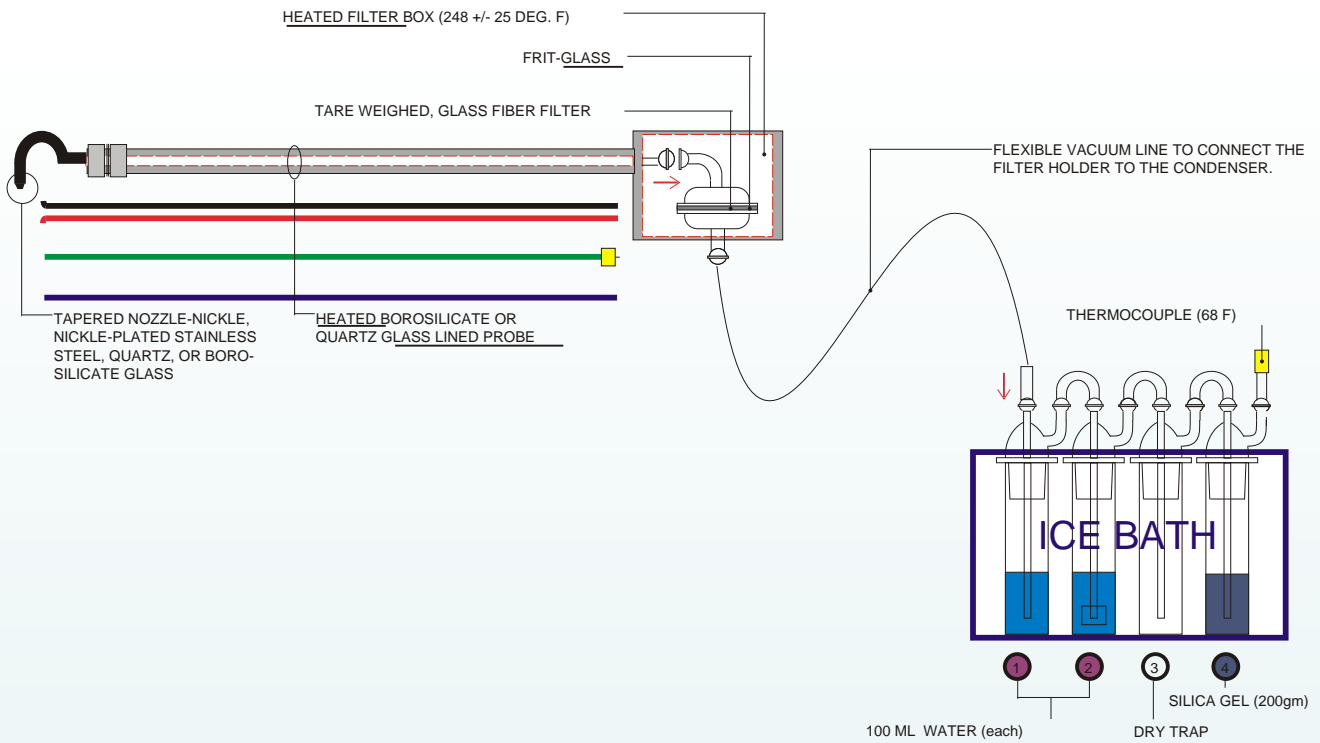

SAMPLE RECOVERY		
 Petri Dish CONTAINER NO.1	FILTER 	TRANSFER TO PETRI DISH & SEAL THE CONTAINER
 GLASS OR POLY. CONTAINER NO.2	NOZZLE, FITTING, PROBE LINER & FR. 1/2 FILTER HOLDER (Use Nylon Bristle Probe & Nozzle Brushes)	RINSE INSIDE COMPONENTS W/ ACETONE 3 TIMES OR UNTIL NO VISIBLE PARTICLES
 SILICA GEL CONTAINER NO.3		5 WEIGH AND DISCARD
		1 2 3 MEASURE GAIN AND DISCARD

BLANKS	
 GLASS ACETONE BLANK CONTAINER	200 ml OF ACETONE TAKEN DIRECTLY FROM THE WASH BOTTLE USED

REAGENTS	
 ACETONE SQUIRT BOTTLE (GLASS OR POLYETHYLENE)	ACETONE (REAGENT GRADE)

Copyright © Colleen Hodge 1998

ActiveSET.org

ActiveSET.org

ActiveSET.org

All rights reserved. No Part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of the publisher and author.